

Parrot CK3300 with Nokia 6670 and TOMTOM Mobile 5



***TOMTOM
Mobile 5***



Nokia 6670

Features

- GPS and Handsfree connections at the same time
- Voice navigation instructions through the car speakers
- Automatic switch between GPS and phone applications
- Voice navigation instructions are not played during a call
- GPS automatic connection

SetUp Procedures

- HandsFree Setup Procedure.
- HandsFree disconnection.
- GPS Setup Procedure.
- HandsFree & GPS connections at the same time.

Step 1 - HandsFree connection



CK3300's start screen



Phone main screen

Step 1 - HandsFree connection



On the Menu screen,
please select the
Connectivity icon



Select the Bluetooth icon



Make sure the Bluetooth
is ON, then press on the
right arrow of the phone

Step 1 - HandsFree connection



Please enter in the
OPTIONS menu



Select the NEW PAIRED
DEVICE option



The phone will detect
the Bluetooth devices

Step 1 - HandsFree connection



Select your CK3300



Enter 1234 as PASSKEY



Accept the connection

Step 2 : HandsFree disconnection



Select Parrot CK3300



Disconnect the phone
and the CK3300

Step 2 : HandsFree disconnection



The phone and the Parrot
CK3300 are now disconnected

Step 3 : GPS connection



Navigate to the Parrot CK3300
GPS menu



Then click on
ACTIVATE / DEACTIVATE

Step 3 : GPS connection



Activate the carkit GPS function



From the phone, click on the
TOMTOM icon

Step 3: GPS connection



TOMTOM's start screen



Please press the joystick button of your Nokia 6681

Step 3: GPS connection



Select the CHANGE PREFERENCES icon




Please select the SHOW GPS STATUS icon

Step 3: GPS connection



Please select the
Configure option

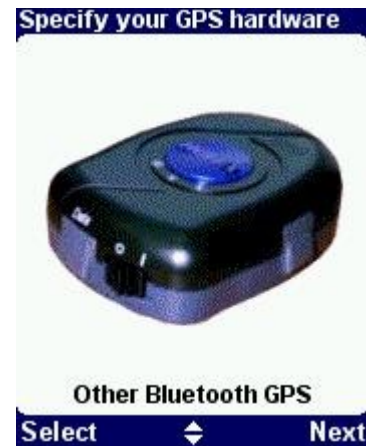

Set Parrot CK3300 as the
default GPS device

Step 3: GPS connection



Please select the Continue option



The Nokia 6681 will search for Bluetooth devices



Please select your CK3300

Step 3: GPS connection



Please select the CONTINUE option



TOMTOM software is receiving GPS signal from the CK3300

Step 4 : HandsFree & GPS connection at the same time



HandsFree & GPS connection are activated at the same time
(the GPS icon is displayed)



Navigation with TOMTOM