

Parrot 3400 LS GPS with I-mate K-JAM and Copilot Live 6

Tested with ROM 2,16,9,1 WWE



I-mate K-Jam



Copilot Live 6



Features

- GPS and Handsfree connection at the same time.
- Voice navigation instructions through PDA headspeakers.
- Automatic switch between GPS and phone applications.
- Voice navigation instructions are not played during a call
- Automatic GPS connection



SetUp Procedures

- Setup Procedure.
- Copilot Live 6 Setup Procedure.

Step 1 - Setup Procedure



Parrot 3400 LS GPS's
start screen



Please consult the SETTINGS
menu of the car kit




Step 1 - Setup Procedure




In the car kit, review the PAIRED DEVICES \ OTHERS PHONES menu. The car kit will display a PIN code.

Step 1 - Setup Procedure

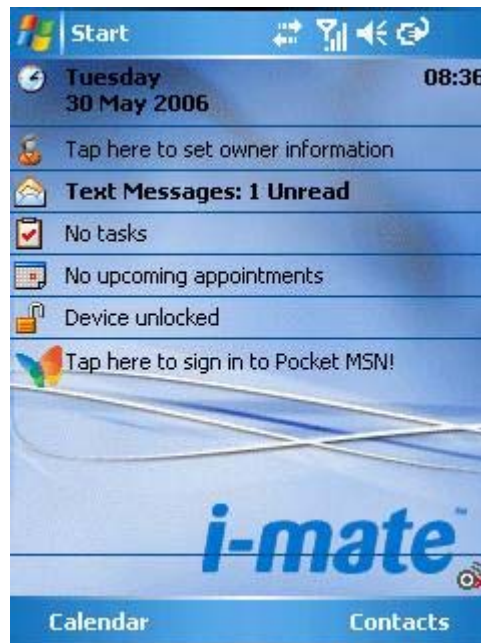

From the Smartphone's Today screen, please consult the START menu

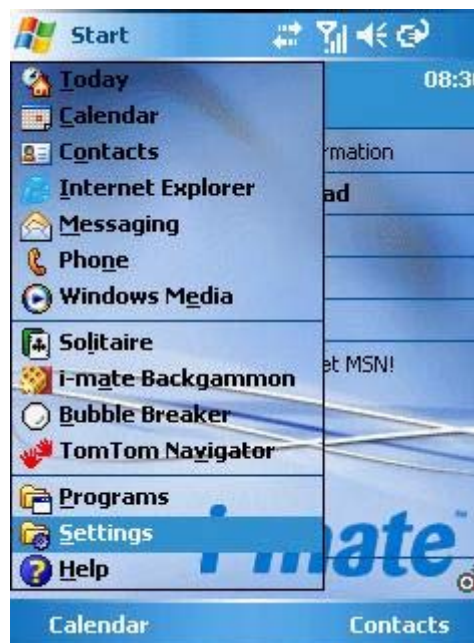

Select the SETTINGS command




Select the CONNECTIONS tab

Step 1 - Setup Procedure



Select the BLUETOOTH icon

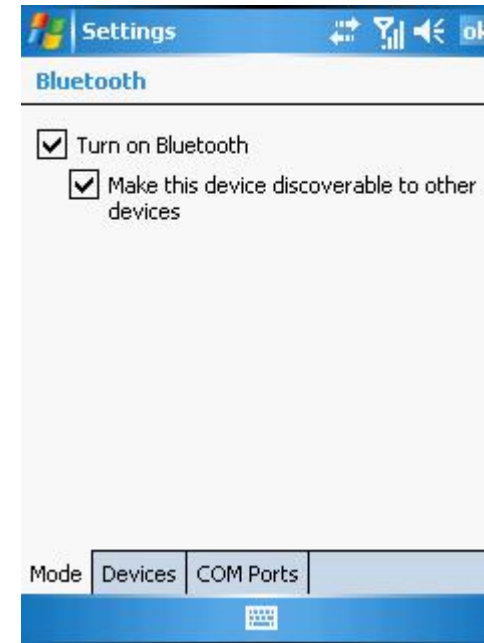

Please make sure that the Bluetooth is ON and then tap on the DEVICES tab




Step 1 - Setup Procedure



Select the NEW PARTNERSHIP command




Imate K-Jam is searching for Bluetooth devices

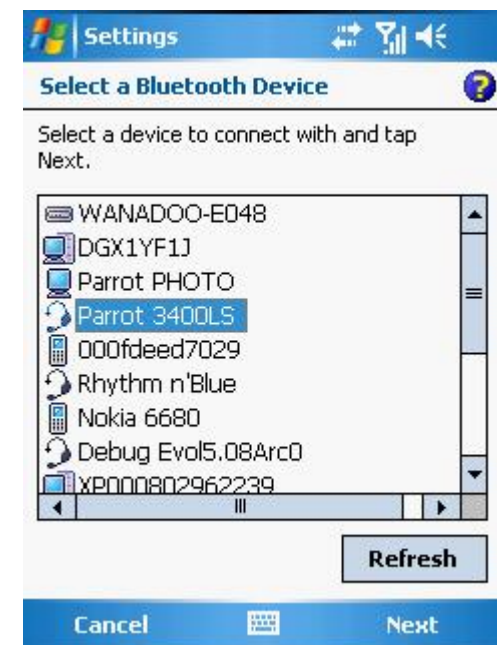


Select your Parrot 3400 LS GPS



Step 1 - Setup Procedure

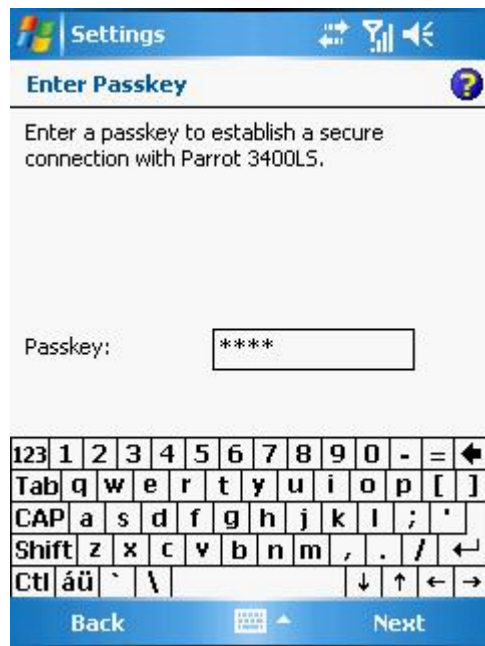

Enter the PIN CODE displayed by the car kit

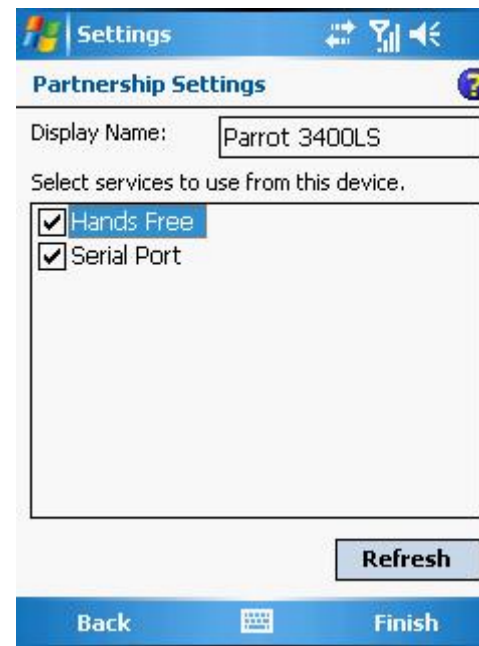

Active the HandsFree and Serial Port services.




The Pairing is done, a connection will be done automatically



Step 1 - Setup Procedure




On the COM PORTS tab,
please select the
NEW OUTGOING PORT command

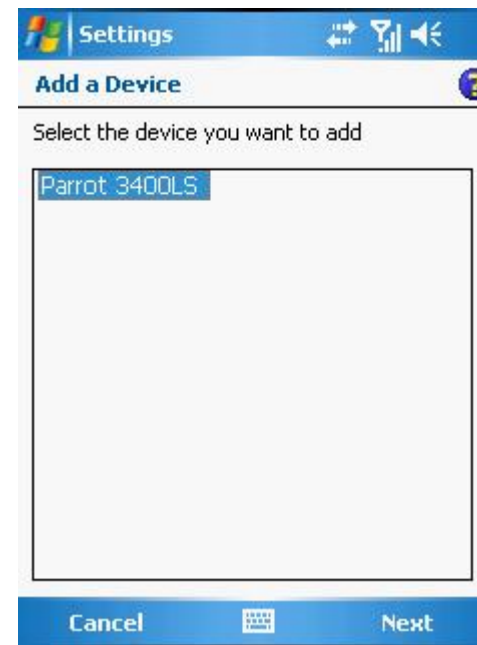


Select your Parrot 3400 LS GPS.



Step 1 - Setup Procedure

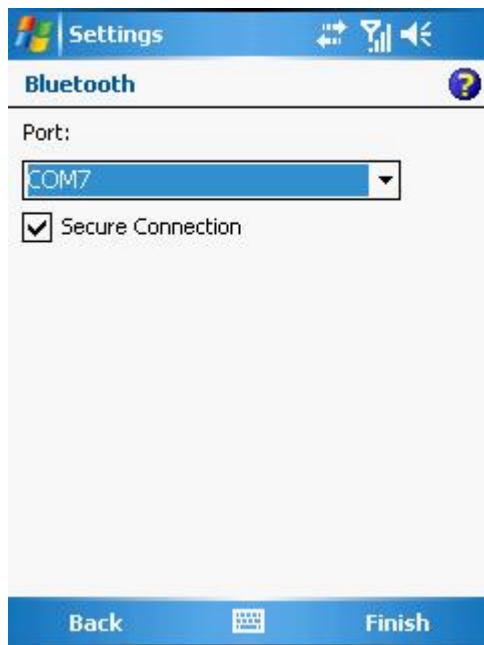

Select the OUT GOING COM PORT 7

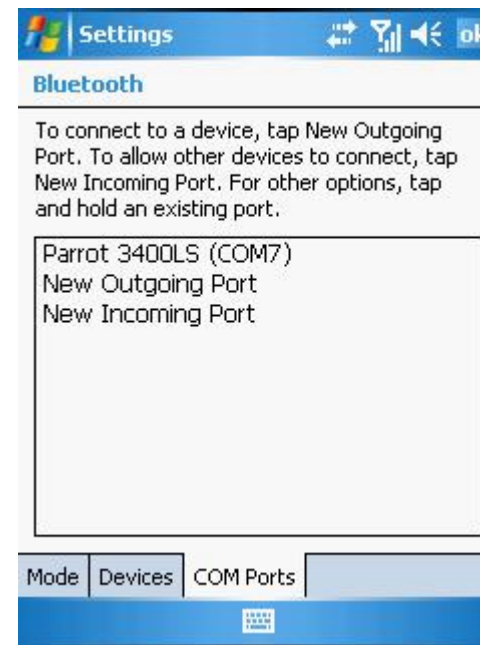

An outgoing COM port has been created

Step 1 - Setup Procedure



HandsFree connection is done

Step 1 - Setup Procedure



Navigate to the Parrot 3400 LS GPS menu



Consult the ACTIVATE / DEACTIVATE menu of the Parrot 3400 LS GPS




Make sure the GPS feature is activated

Step 1 - Setup Procedure




Press the car kit's red button.
Your car kit and your mobile phone will
be disconnected

Step 2 – Copilot Live 6 Setup Procedure

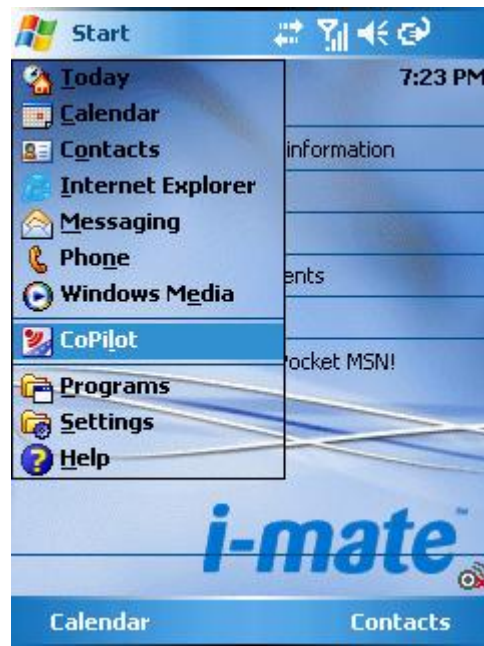

Please start
the Copilot Live 6 software

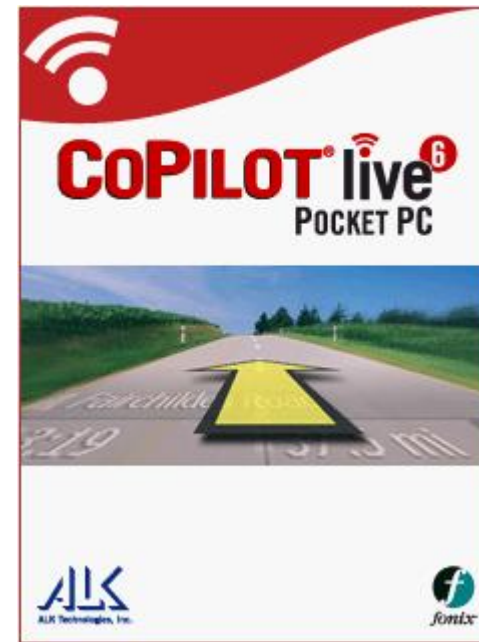


Copilot Live 6's start screen

Step 2 – Copilot Live 6 Setup Procedure



Tap on the GPS icon

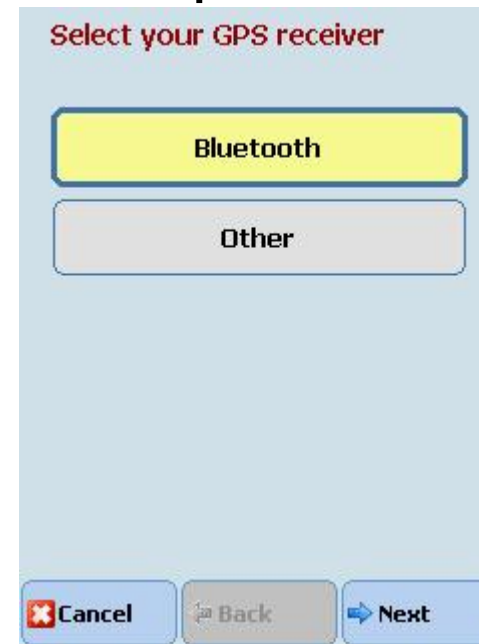

Choose the BLUETOOTH option and validate




Step 2 – Copilot Live 6 Setup Procedure



Copilot Live 6 is searching for Bluetooth devices



Select Parrot 3400 LS

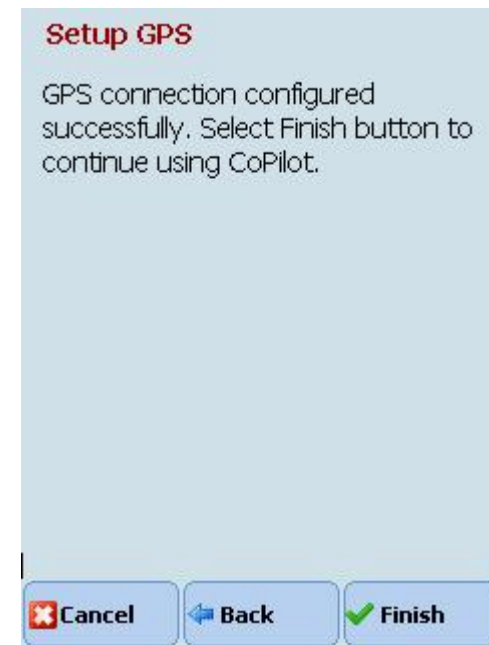

Your Parrot 3400 LS GPS is defined as a GPS receiver

Step 2 – Copilot Live 6 Setup Procedure



On the HOME screen,
tap on the GOING TO icon



Tap on the NEW TRIP icon



Tap on the ADDRESS icon
to define your destination

Step 2 – Copilot Live 6 Setup Procedure

Enter Country:

F

F -- France

Cancel Back Next

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	←	←	123	ÉÜ

Choose the country of your destination

Enter City or Postcode:

Paris

F - France

Paris, Paris

Paris-l'Hopital, Saône-Et-Loire

Paris-l'Hôpital, Saône-Et-Loire

Parisol. Tarn

Cancel Back Next

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	←	←	123	ÉÜ

Define the City

Enter Street Address:

1 Rue De La Paix

Paris, F 75001

<City Center>

Rue de la Paix

Cancel Back Next


A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	←	←	123	ÉÜ

Define your destination address

Step 2 – Copilot Live 6 Setup Procedure




Define a name for your destination

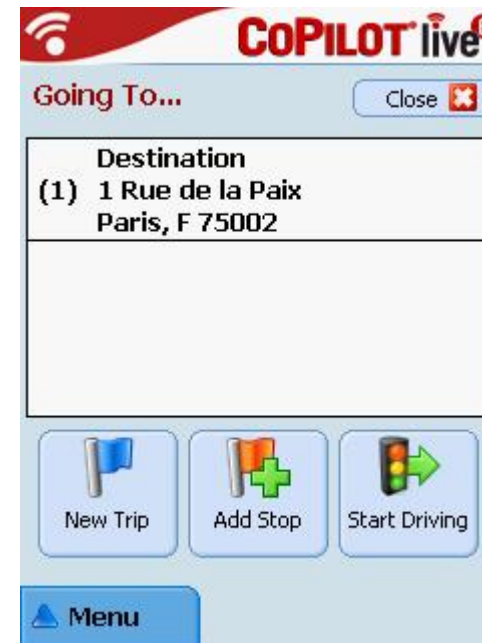

Tap on the START DRIVING icon

Step 2 – Copilot Live 6 Setup Procedure

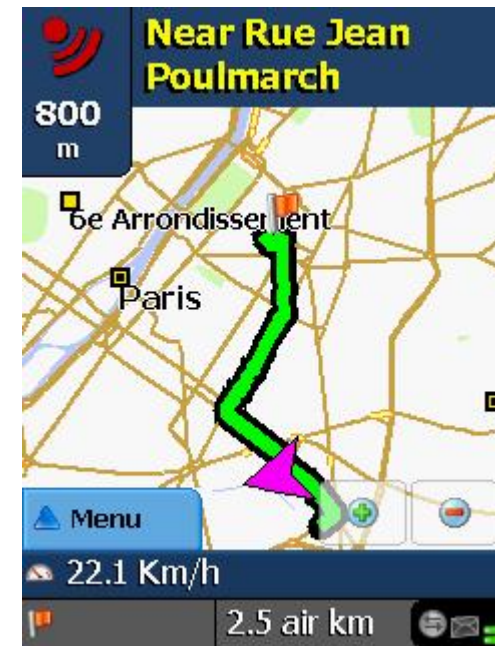

Navigation with Copilot Live 6