

## Parrot MULTICAN for Mercedes 3 cars

**Parrot MULTICAN** is a unit able to control Parrot H/F kits with the car's steering wheel commands working with CANBUS or K-BUS systems. This unit is available in two versions, one working with the CK3000 Evolution, another for the CK3100.

### Compatibility car models :

<b>Class E :</b> 2004 - 2007	<b>SLK :</b> 2003 - 2007
------------------------------	--------------------------



### Parrot Reference :

- If you are interested, contact our sales department : [sales@parrot.fr](mailto:sales@parrot.fr)

#### For Parrot CK3000 EVOLUTION

- Parrot MULTICAN : **PI090001AA**

#### For Parrot CK3100 LCD

- Parrot MULTICAN : **PI090002AA**



Depending on your vehicle's steering wheel controls, there are several possibilities for using a hands-free kit with the steering wheel controls:



- **Mode 1:** the steering wheel does not feature any phone button, but only volume adjustment controls ("Volume (+)" and "Volume (-)" buttons)
- **Mode 2:** the steering wheel features a single "Phone" button
- **Mode 3:** the steering wheel features an "Answer" button and a "Hang up" button

With Mercedes steering wheels configuration, you can use either **Mode 1** or **Mode 2** or **Mode 3**. **Mode 1** is used by default, in this mode; no specific phone button buttons are used.

**Mode 2** is immediately activated when a "Phone" button is pressed. The interface instantly detect that the steering wheel contains this specific button.

**Mode 3** is activated when a "Hang up" button is pressed. The interface instantly detect that the steering wheel contains this specific button.

## Mode 1: Using with the volume adjustment buttons


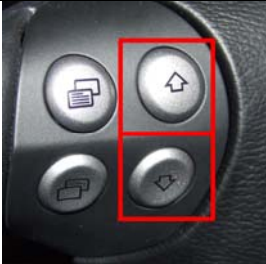
	<p>Depending on the steering wheel controls in your vehicle, the MULTICAN interface will enable you to take full advantage of the features available on your hands-free kit:</p>	
---	--	---

•Answer an incoming call:	Press the "Volume (+)" button.
•End a call:	Press the "Volume (-)" button.
•Refuse an incoming call:	Press the "Volume (-)" button.
•Start the voice recognition feature:	Quickly press the "Volume (+)" button, then press the "Volume (-)" button.
•Redial the last number:	Quickly press the "Volume (+)", followed by a long press of the "Volume (-)" until the number is dialed.
•Discreet mode:	Quickly press the "Volume (+)" button.
•Exit discreet mode:	During the call, quickly press the "Volume (+)" button followed by a press of the "Volume (-)" button
•Increase the volume:	During the call, press the "Volume (+)" button and then on the "Volume (-)" button repeat this procedure until you reach the required volume.
•Lower the volume:	During the call, press the "Volume (-)" button and then on the "Volume (+)" button repeat this procedure until you reach the required volume.

### The followings functions are only possible with Parrot CK3000 Evolution

•Enter the menu:	Press the following sequence twice: "SEEK up" button then the "SEEK down" button. These buttons are used to search for radio stations.
•Go forward through the menu:	Press the "Volume (+)" button and then the "Volume (-)" button, leaving one second between each press.
•Go backwards through the menu:	Press the "Volume (-)" button and then the "Volume (+)" button, leaving one second between each press.
•Select a menu option:	Press the "Volume (+)" button.
•Cancel a function:	Press the "Volume (-)" button.
•Reset the hands-free kit:	Repeat the following sequence five times: press the "Volume (-)" button and then the "Volume (+)" button

## Mode 2: Using with a single phone button

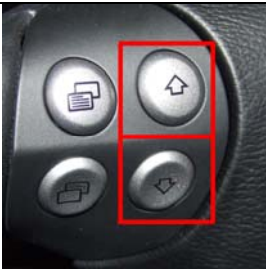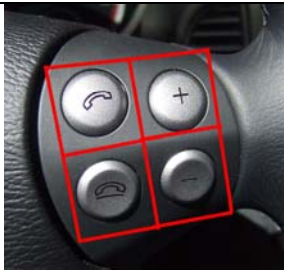

	<p>Depending on the steering wheel controls in your vehicle, the MULTICAN interface will enable you to take full advantage of the features available on your hands-free kit:</p>	
---	--	---

<ul style="list-style-type: none"> <li>•Answer an incoming call:</li> </ul>	<p>Press the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•End a call:</li> </ul>	<p>Long press of the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Refuse an incoming call:</li> </ul>	<p>Long press of the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Start the voice recognition feature:</li> </ul>	<p>Press of the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Redial the last number:</li> </ul>	<p>Long press of the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Discreet mode:</li> </ul>	<p>Press the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Exit discreet mode:</li> </ul>	<p>Press the "Phone" button</p>
<ul style="list-style-type: none"> <li>•Increase the volume:</li> </ul>	<p>During the call, press the "Volume (+)" button, repeat this procedure until you reach the required volume.</p>
<ul style="list-style-type: none"> <li>•Lower the volume:</li> </ul>	<p>During the call, press the "Volume (-)" button, repeat this procedure until you reach the required volume.</p>

### The followings functions are only possible with Parrot CK3000 Evolution

<ul style="list-style-type: none"> <li>•Enter the menu:</li> </ul>	<p>Press the following sequence twice: [SEEK up] button then the [SEEK down] button.</p>
<ul style="list-style-type: none"> <li>•Go forward through the menu:</li> </ul>	<p>Press the "Volume (+)" button.</p>
<ul style="list-style-type: none"> <li>•Go backwards through the menu:</li> </ul>	<p>Press the "Volume (-)" button.</p>
<ul style="list-style-type: none"> <li>•Select a menu option:</li> </ul>	<p>Press the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Cancel a function:</li> </ul>	<p>Long press of the "Phone" button.</p>
<ul style="list-style-type: none"> <li>•Reset the hands-free kit:</li> </ul>	<p>Repeat the following sequence five times: press the "Volume (-)" button and then the "Volume (+)".</p>

### Mode 3: Using with 2 phone buttons

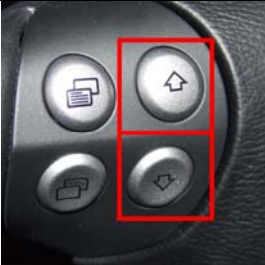	<p>Depending on the steering wheel controls in your vehicle, the MULTICAN interface will enable you to take full advantage of the features available on your hands-free kit:</p>	
---	--	---

•Answer an incoming call:	Press the "Pick up" button.
•End a call:	Press the "Hang up" button.
•Start the voice recognition feature:	Quick press of the " Pick up " button.
•Redial the last number:	Long press of the " Pick up " button.
•Discreet mode:	Press the " Pick up " button.
•Exit discreet mode:	Press the " Pick up " button.
•Increase the volume:	During the call, press the "Volume (+)" button until you reach the required volume.
•Lower the volume:	During the call, press the "Volume (-)" button until you reach the required volume.

#### The followings functions are only possible with Parrot CK3000 Evolution

•Enter the menu:	Press the following sequence twice: [SEEK up] button then the [SEEK down] button.	
•Go forward through the menu:	Press the "Volume (+)" button.	
•Go backwards through the menu:	Press the "Volume (-)" button.	
•Select a menu option:	Quickly press the "Pick up" button.	
•Cancel a function:	Quickly press of the "Hang up" button.	
•Reset the hands-free kit:	Repeat the following sequence five times: press the "Volume (-)" button and then the "Volume (+)".	


# Wiring diagram for CK3000 EVOLUTION and CK3100 LCD

It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.


In this technical document, you will find all information for correctly install your MULTICAN interface.

**Important: Usually the 12v ignition is supplied by MULTICAN unit**

## CK3000 EVOLUTION

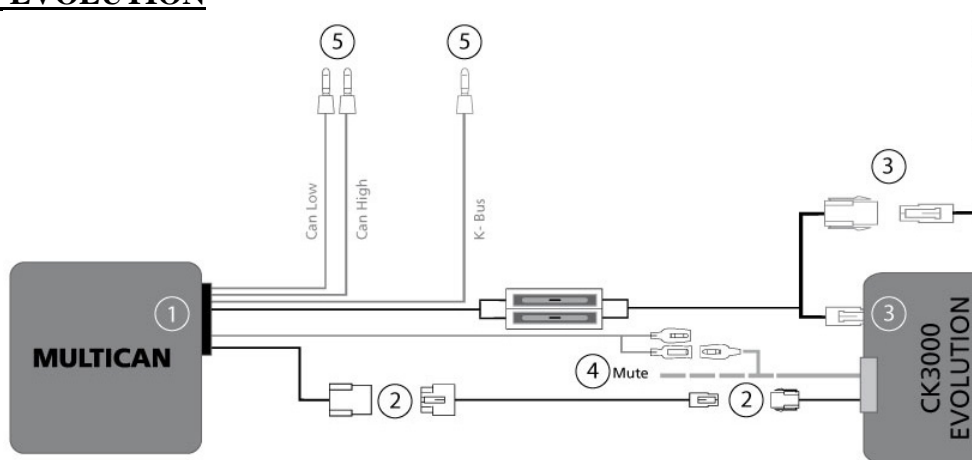

## CK3100 LCD

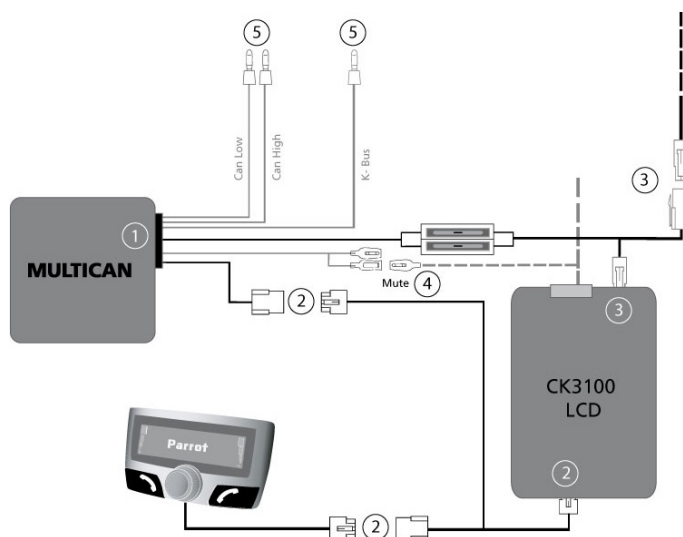


## 1

**MULTICAN interface**


Connect the power cable of the MULTICAN interface to the 14-way connector of the MULTICAN interface.



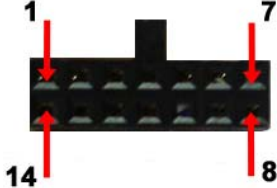





Pin Number	Colour	Description
1	Red	12v Permanent
2	Yellow	Mute input
3	Orange	12v Ignition
4	Green / Black	
5	Blue	
6	Green	Can High
7	Grey	
8	Yellow / Brown	
9	White	Can Low
10	Yellow / White	
11	Blue / Red	
12	Brown	
13	Purple	K-BUS
14	Black	Ground




②



## Keypad Adapter



Join the connector of the kit's control keypad to the connector on the interface's power cable.

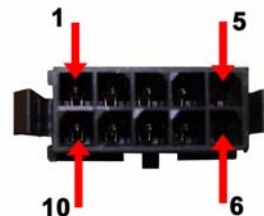Pin Number		Colour
1		Yellow / Brown
2		Grey
3		Yellow / White
4		
7		Brown
8		Blue / Red
9		Green / Black
10		Blue









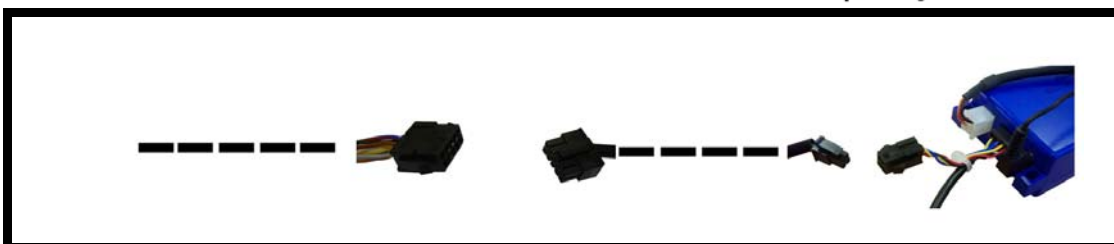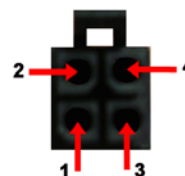



- CK3000 EVOLUTION

Pin Number		Colour
2		Green
3		White / Yellow



- CK3100 LCD

Pin Number		Colour
1		Black
2		Red / Blue
3		Green / Black
4		Brown
5		Green / Red
6		Grey / Black
7		Blue
8		Yellow / Red

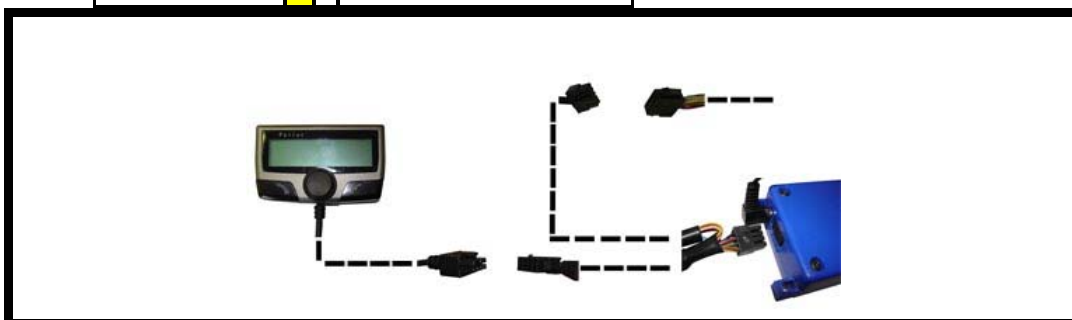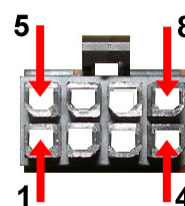




Connect the LCD harness to the adapter.

## 3

### Supply connections

**Important:** Usually the 12v ignition is supplied by MULTICAN unit

Pin Number	Colour	Description
1	Red	12v Permanent
2	Black	Ground
3	Orange	12v Ignition

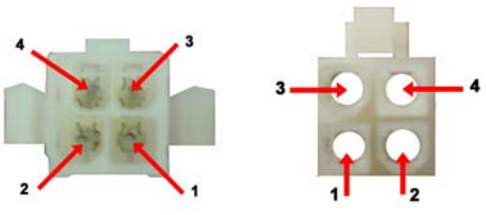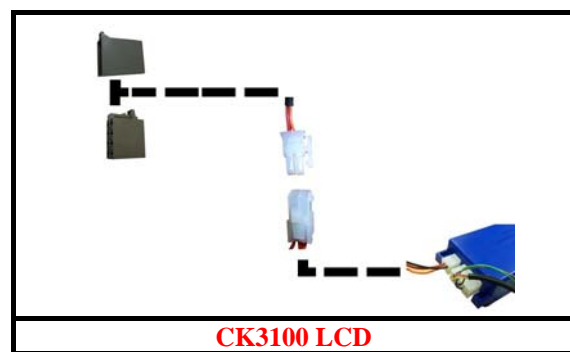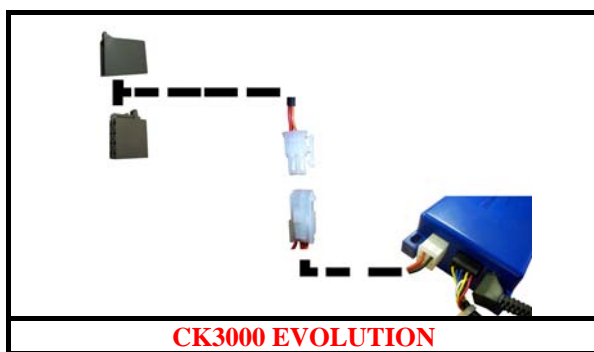



Connect the MULTICAN interface's power cable to the Parrot control unit and to the power cable of the hands-free kit.

## 4

### Mute input

Colors	Cable	Description
Yellow	Mute cable	Mute Output
Yellow	MULTICAN cable	Interface Mute input
White	ISO Power cable	Mute input 1
Yellow	ISO Power cable	Mute input 2
Blue	ISO Power cable	Mute input 3

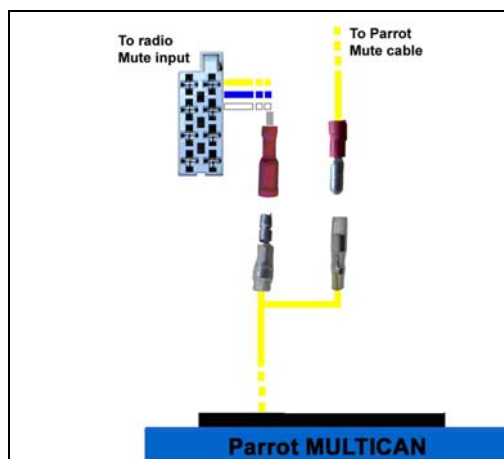

Connect the yellow mute wire of the MULTICAN interface :

- To the Parrot yellow mute wire
- And to the car stereo's mute input if applicable




*Notes:*


If you don't know where your mute input is, see the usual guide of your radio or contact your Mercedes dealer for having the correct position of mute input.

5

## CAN Configuration Mercedes

The wires corresponding to the CAN protocol must be connected correctly to your car stereo's CAN information. It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

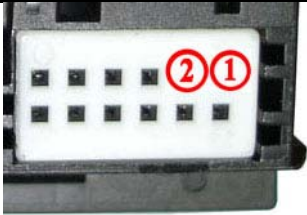N°		Color	Description	
1		Green	CAN High	
2		White	CAN Low	Fakra male connexion
Not used		Violet	K-BUS	 Fakra female connexion

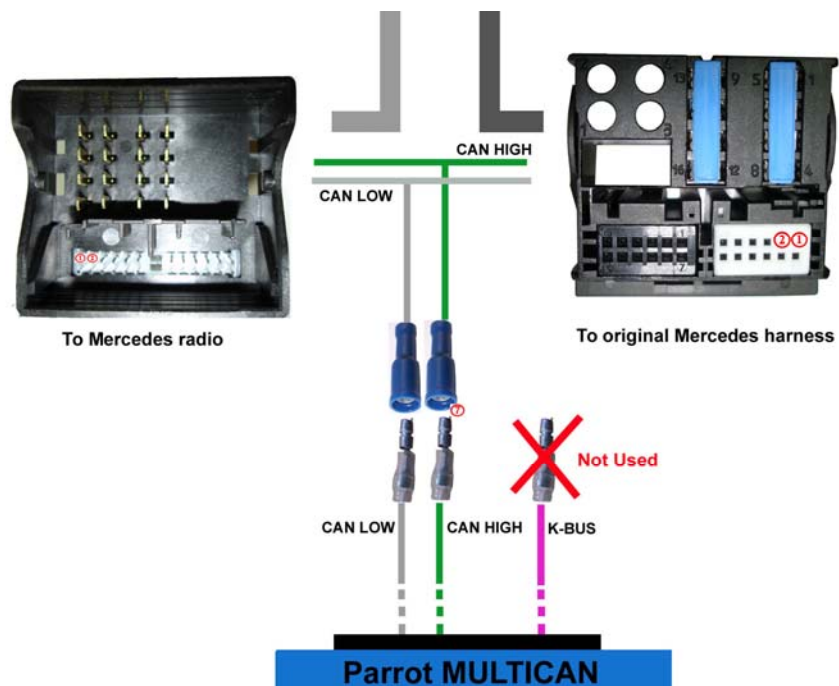

**Connect the white wire corresponding to CAN High to pin 1.**  
**Connect the green wire corresponding to CAN Low to pin 2.**