

## Parrot MULTICOMM For Opel steering wheel

**Parrot MULTICOMM** is a unit able to control Parrot H/F kits with the car's steering wheel commands working with ANALOG STEERING WHEEL COMMANDS with OEM headunit installed.

This unit is available in two versions, one working with the Parrot CK3000 EVOLUTION another for the Parrot CK3100 LCD.



### Compatibilty car models :

All the Opel group: < 2004



### Parrot Reference :

If you are interested, contact our sales department: [sales@parrot.fr](mailto:sales@parrot.fr)

#### For Parrot CK3000 EVOLUTION

- Parrot MULTICOMM : **PI090003AA**

#### For Parrot CK3100 LCD

- Parrot MULTICOMM : **PI090004AA**




### Features :

Depending on your vehicle's steering wheel controls, there are several possibilities for using a hands-free kit with the steering wheel controls:

- **Mode 1:** the steering wheel does not feature any phone button, but only volume adjustment controls ("Volume (+)" and "Volume (-)" buttons)
- **Mode 2:** the steering wheel features a single "Phone" button
- **Mode 3:** the steering wheel features an "Answer" button and a "Hang up" button

With these Opel cars, you can only use **Mode 1** . .

## **Mode 1: Using with the volume adjustment buttons**

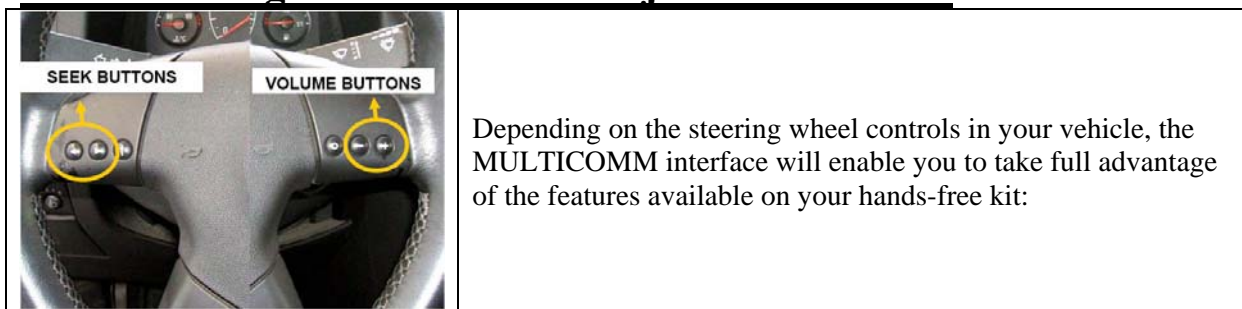

•Answer an incoming call:	Press the "Volume (+)" button.
•End a call:	Press the "Volume (-)" button.
•Refuse an incoming call:	Press the "Volume (-)" button.
•Start the voice recognition feature:	Quickly press the "Volume (+)" button, then press the "Volume (-)" button.
•Redial the last number:	Quickly press the "Volume (+)", followed by a long press of the "Volume (-)"until the number is dialled.
•Discreet mode:	Quickly press the "Volume (+)" button.
•Exit discreet mode:	During the call, quickly press the "Volume (+)" button followed by a press of the "Volume (-)" button
•Increase the volume:	During the call, press the "Volume (+)" button and then on the "Volume (-)" button repeat this procedure until you reach the required volume.
•Lower the volume:	During the call, press the "Volume (-)" button and then on the "Volume (+)" button repeat this procedure until you reach the required volume.

### **The followings functions are only possible with Parrot CK3000 Evolution**


•Enter the menu:	Press the following sequence twice: "SEEK up" button then the "SEEK down" button. These buttons are used to search for radio stations.
•Go forward through the menu:	Press the "Volume (+)" button and then the "Volume (-)" button, leaving one second between each press.
•Go backwards through the menu:	Press the "Volume (-)" button and then the "Volume (+)" button, leaving one second between each press.
•Select a menu option:	Press the "Volume (+)" button.
•Cancel a function:	Press the "Volume (-)" button.
•Reset the hands-free kit:	Repeat the following sequence five times: press the "Volume (-)" button and then the "Volume (+)" button.

# Wiring diagram for CK3000 EVOLUTION and CK3100 LCD


It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

In this technical document, you will find all information for correctly install your PARROT MULTICOMM interface.

**CK3000 EVOLUTION**

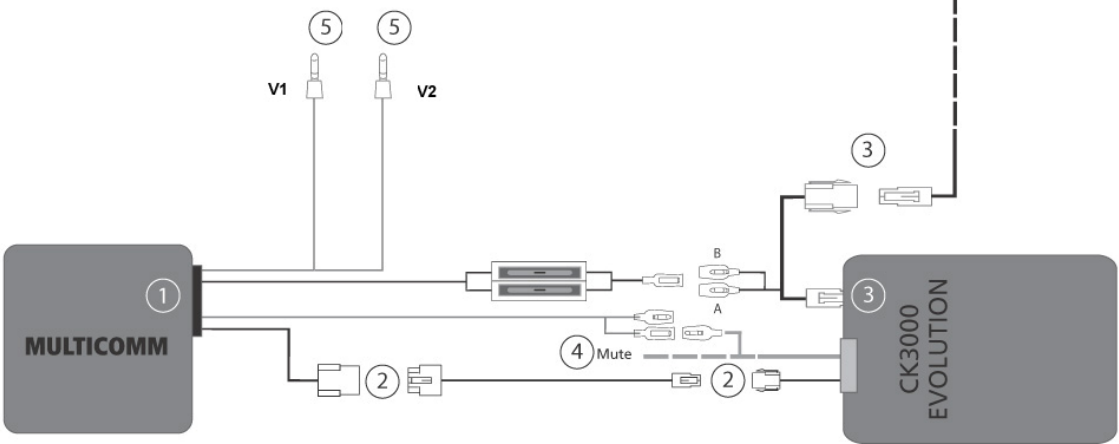

**CK3100 LCD**

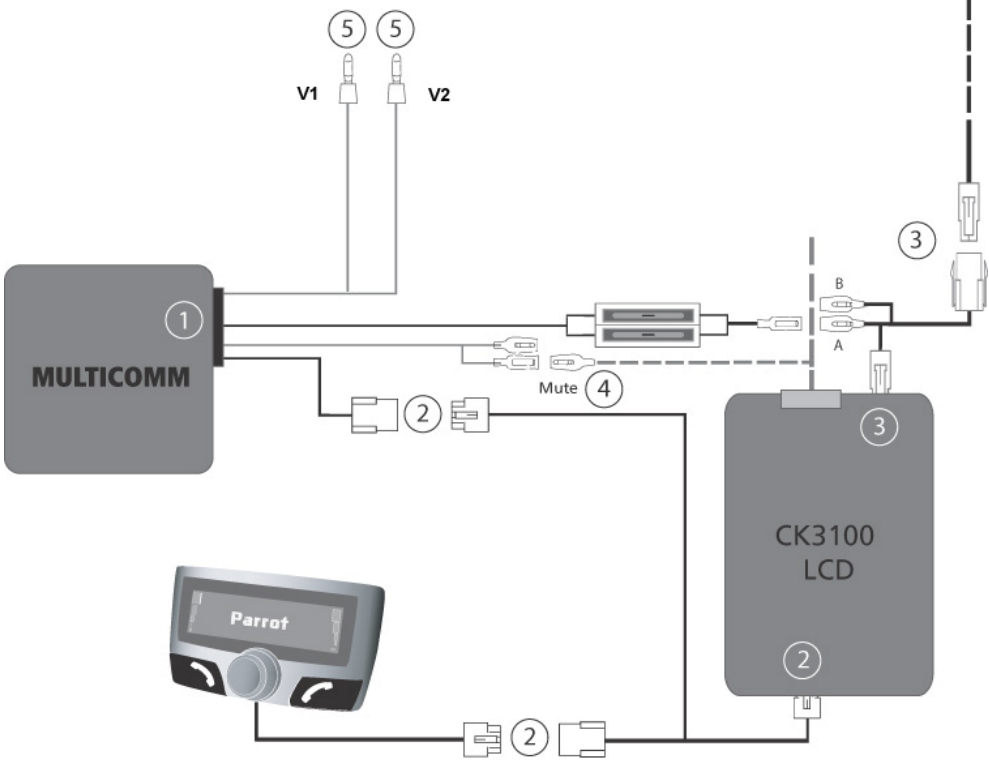










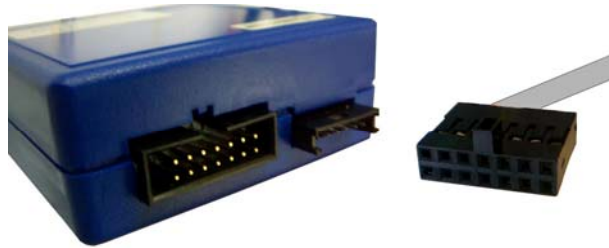






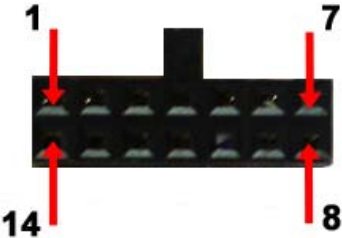
## PARROT MULTICOMM interface

The **Parrot MULTICOMM** is powered with 12Vdc having negative to the ground.  
The **Parrot MULTICOMM** 14 ways connector has 5 wires that are important for the right working:


Connect the power cable of the **Parrot MULTICOMM** interface to the 14-way connector of the **Parrot MULTICOMM** interface.



N°		Color	Function
1		Red / Orange	12v Permanent
2		Yellow	Mute input
3		Pink	
4		Green / Black	
5		Blue	
6		Yellow / White	
8		Yellow /Brown	
9		Grey	
10		White	V2
11		Blue / Red	
12		Brown	
13		Purple	V1
14		Black	Ground



Front view

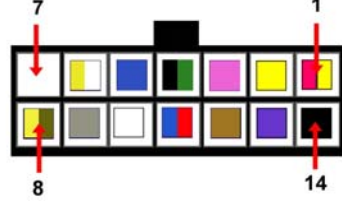










Back view

2



## Keypad Adapter



Join the connector of the kit's control keypad to the connector on the interface's power cable.

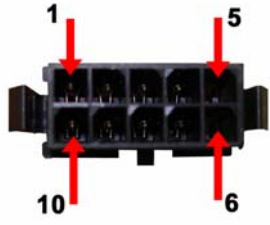Pin Number		Colour
1		Yellow / Brown
2		Grey
3		Yellow / White
4		Pink
7		Brown
8		Blue / Red
9		Green / Black
10		Blue







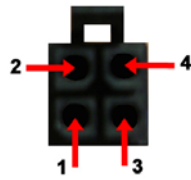





### In case of CK3000 EVOLUTION

Pin Number		Colour
2		Green
3		White / Yellow

### In case of CK3100 LCD

Pin Number		Colour
1		Black
2		Red / Blue
3		Green / Black
4		Brown
5		Green / Red
6		Grey / Black
7		Blue
8		Yellow / Red

Connect the LCD display to the LCD adapter.

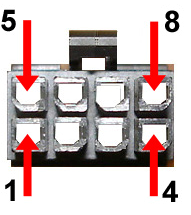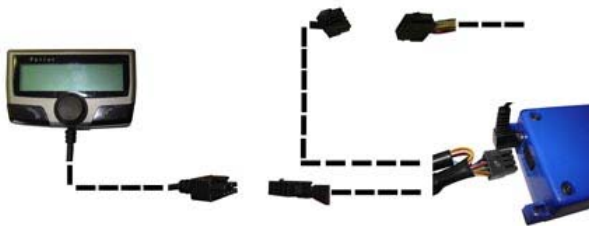3

**Supply connections**

Pin Number	Colour	Description
1	Red	12v Permanent
2	Black	Ground
3	Orange	12v Ignition




**CK3000 EVOLUTION**




**CK3100 LCD**

Connect the Parrot MULTICOMM interface's power cable to the Parrot control unit and to the power cable of the hands-free kit.

4

**Mute input**

Colors	Cable	Description
Yellow	Mute cable	Mute Output
Yellow	MULTICOMM cable	Interface Mute input
White	ISO Power cable	Mute input 1
Yellow	ISO Power cable	Mute input 2
Blue	ISO Power cable	Mute input 3

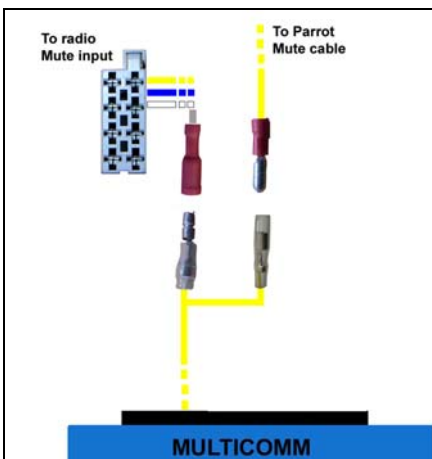

Connect the yellow mute wire of the Parrot MULTICOMM interface :




- To the Parrot yellow mute wire
- And to the car stereo's mute input if applicable


Notes:

If you don't know where your mute input is, see the usual guide of your radio or contact your Opel dealer for having the correct position of mute input.

## Opel protocol configuration

The wires corresponding to the Fiat protocol configuration must be connected correctly to your car stereo's information. It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

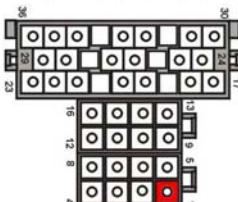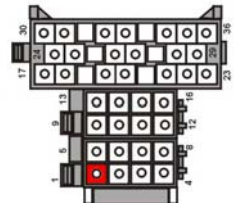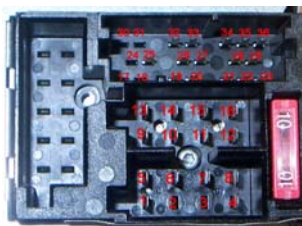N°		Color	Function	Connectors
1		Purple	V1	 <p>Front view of female connector</p>  <p>Rear view of male connector</p>
Ground		White	V2	 <p>view of the radio connector</p>

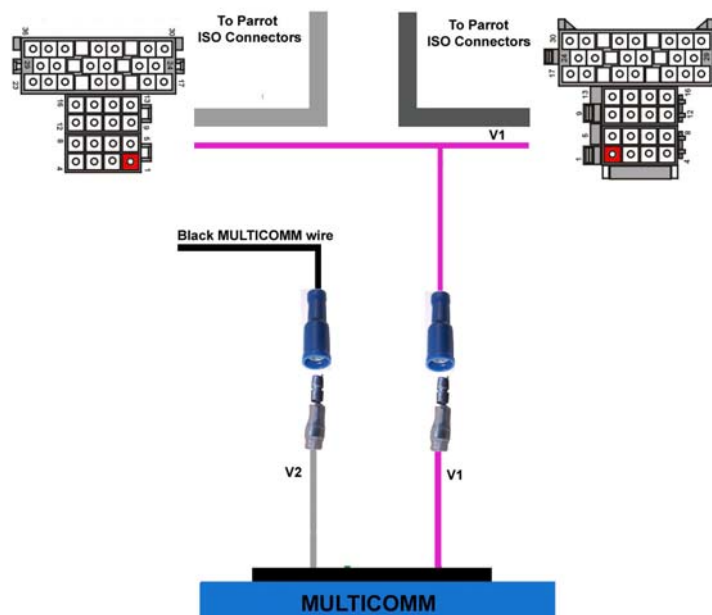

**Connect the purple wire corresponding to V1 to pin 1.  
Connect the white wire corresponding to V2 o the ground plug**