

CK3000 Evolution Upgrade Procedure



Parrot

How can I update the Parrot kit's software?

To update the CK 3000 Evolution kit, there are 2 ways:


1-1 By Serial connection.

You will need a PC, a **Parrot serial cable** and the **Parrot Flash Update wizard** software.


In order to update your kit, please follow these steps:

- Download and install the Parrot Flash Update wizard.(
[http://www.driveblue.com/\(5bqxlpv14goxxeywlwqyj3zj\)/download/Parrot_Flash_update_wizard.exe](http://www.driveblue.com/(5bqxlpv14goxxeywlwqyj3zj)/download/Parrot_Flash_update_wizard.exe))
 - Connect your PC and your car kit with the Parrot serial cable.
 - **!** Don't switch on your Parrot car kit.
 - Start the Parrot Flash Update wizard.




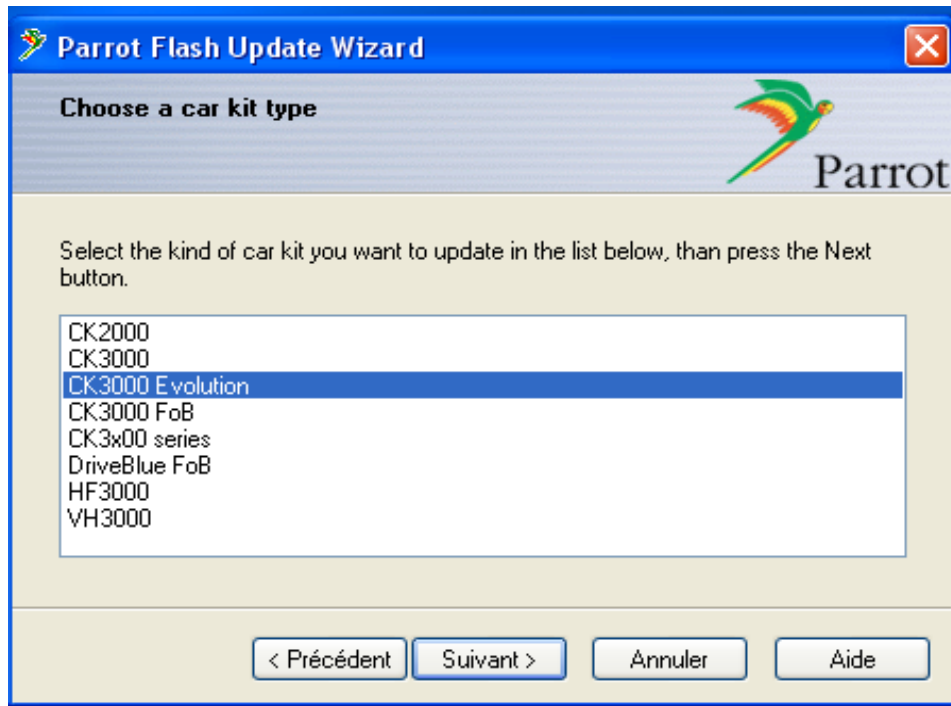


- Click on "Suivant" (Next).
- Select the kind of car kit you want to update: **CK3000 Evolution**.
- Click on "Suivant"(Next).

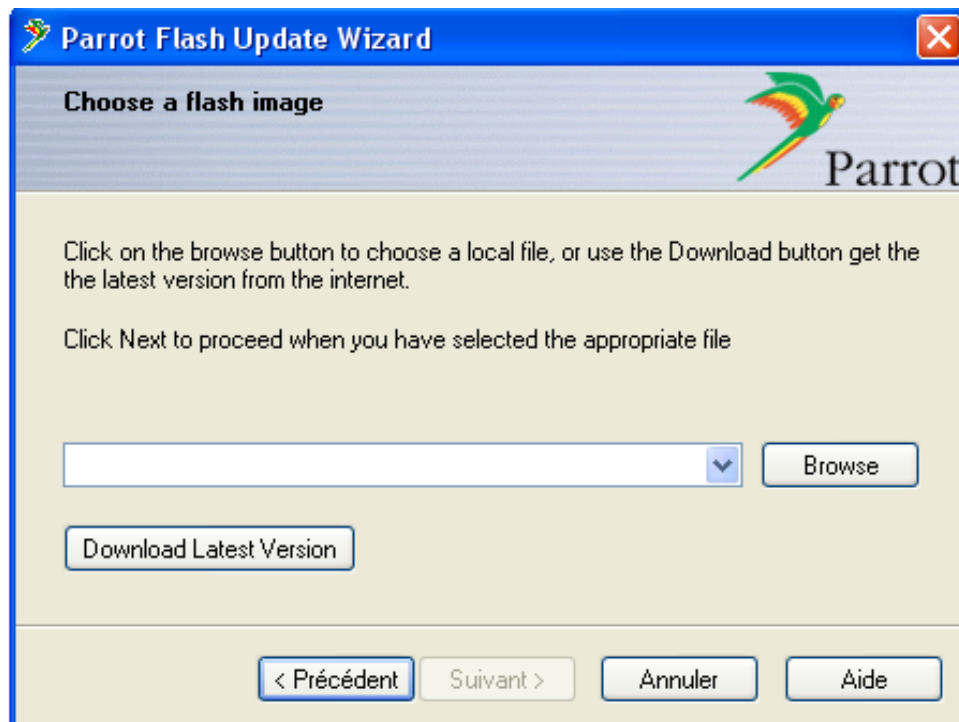


- Wait until the following window appears:

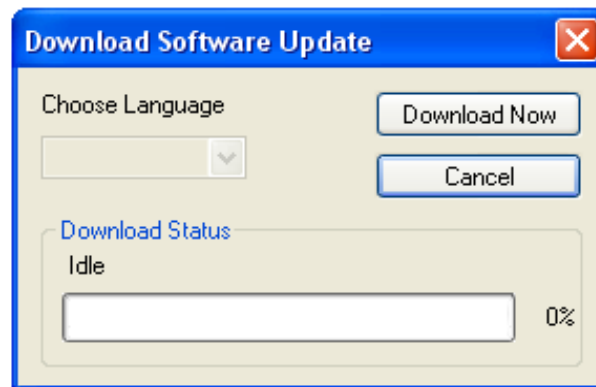


- Click on "Download Now"

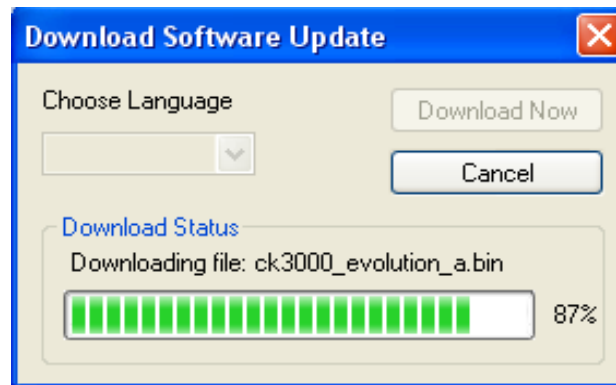


- Wait until the following window appears:

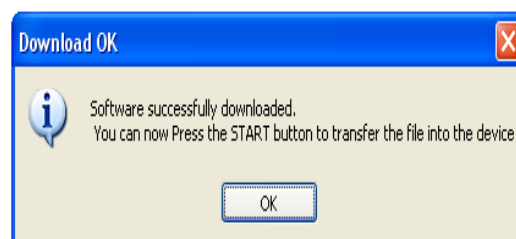


- Click on "OK".

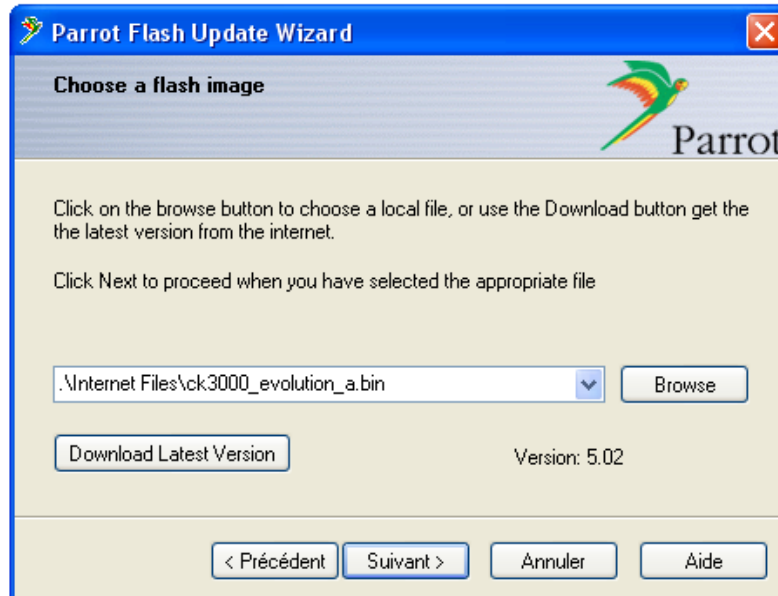


- Click on "Suivant"(Next).

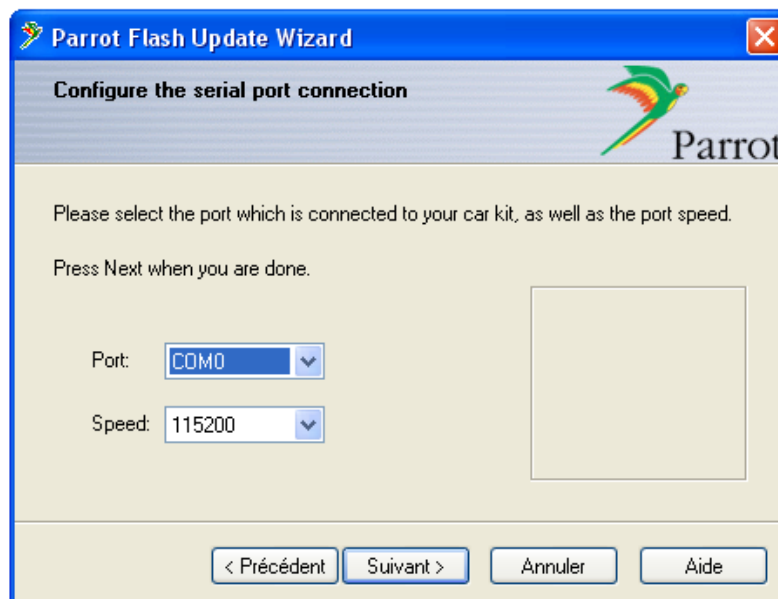

- Select the port which is connected to your car kit.
- Click on "Next".

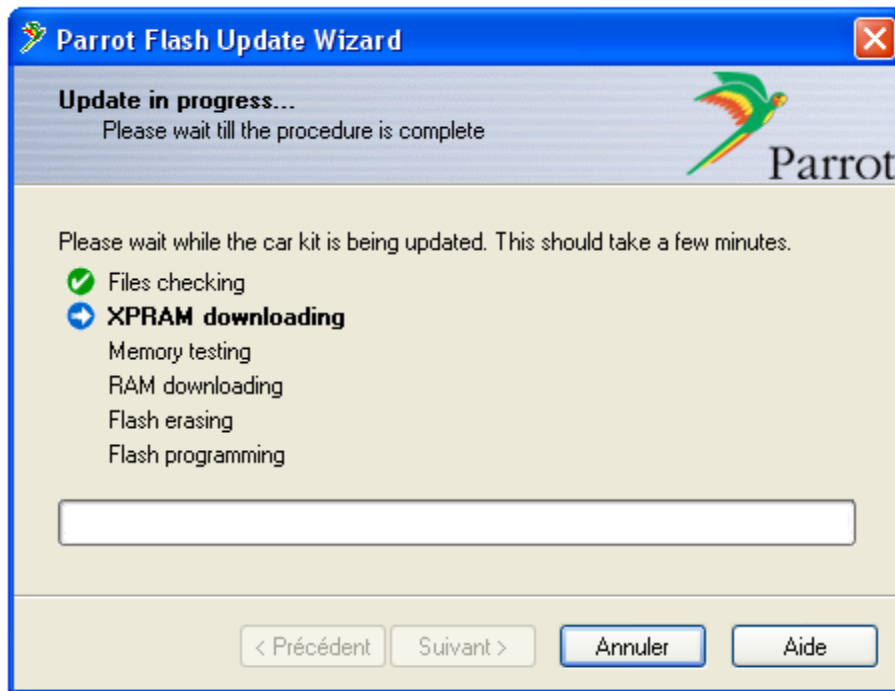

- When the Parrot Flash Update Wizard reaches the “XPRAM downloading”, plug the car kit’s power supply.
- Wait until the Parrot Flash Update wizard completes all of the steps.

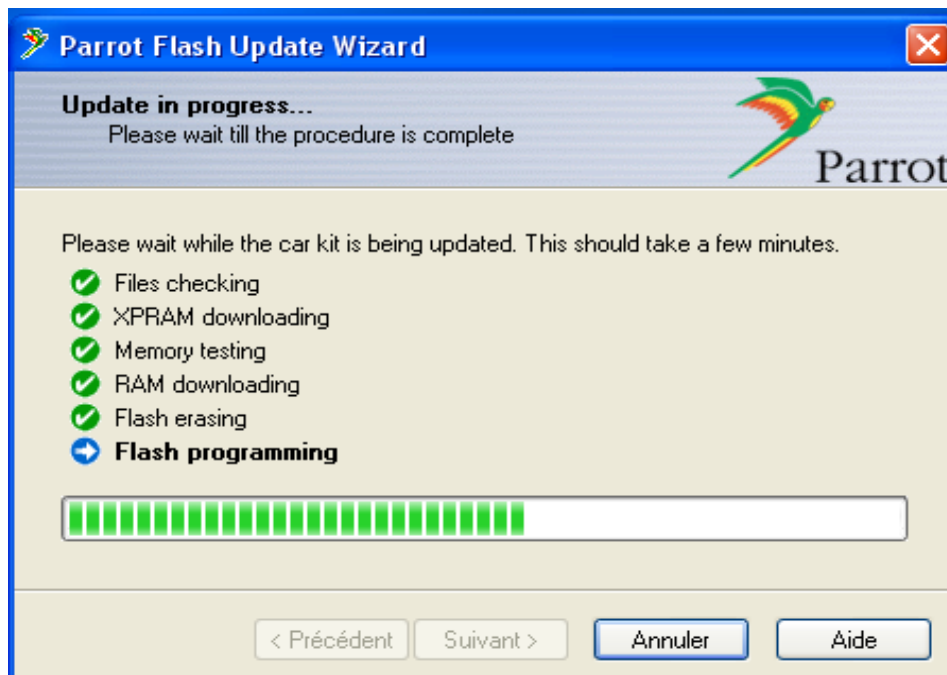




- Click on "Terminer" (finish).
- Disconnect the kit from the PC.
- Wait until your Parrot car kit reboots. This can take up to a few minutes. Do not switch off the ignition or power of your car kit in the mean time

1-2 By Bluetooth


You will need a PC, a **Parrot serial cable** , **Parrot Flash Update wizard** Software and **the Parrot flasher kit** .

In order to update your kit, please follow these steps:


- Download and install the Parrot Flash Update wizard.
- Connect your PC and your Flasher kit with the Parrot serial cable.
- **!** Don't switch on your Parrot car kit.
- Start the Parrot Flash Update wizard.

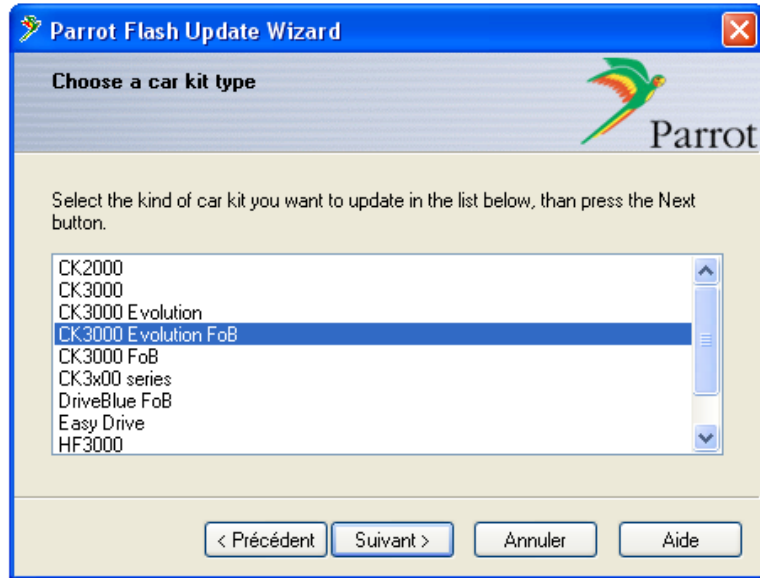

- Select “CK3000 Evolution Fob”

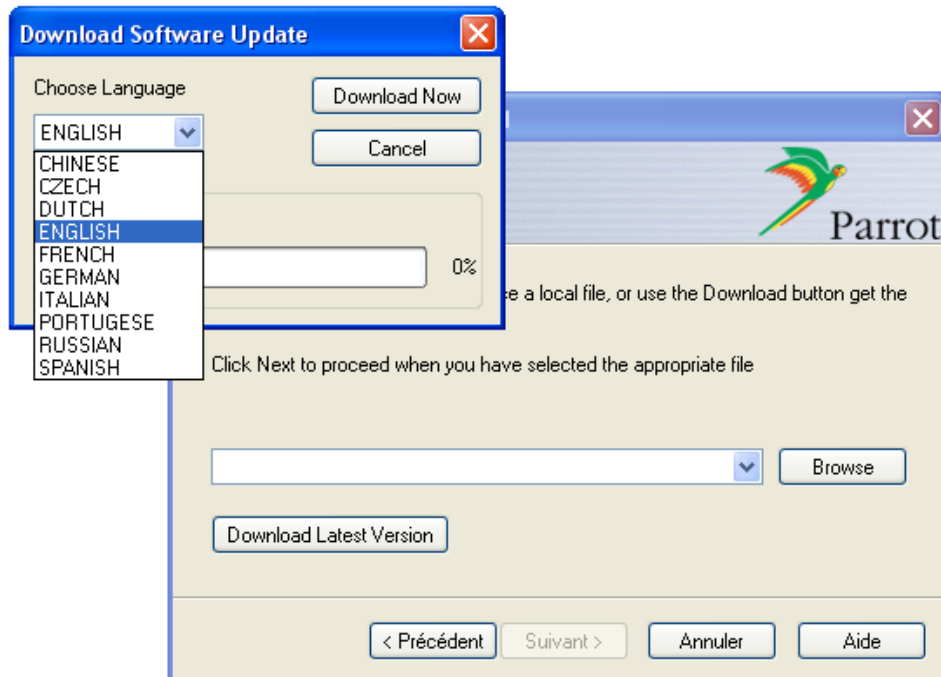


- Then select your language and click on “Download now”

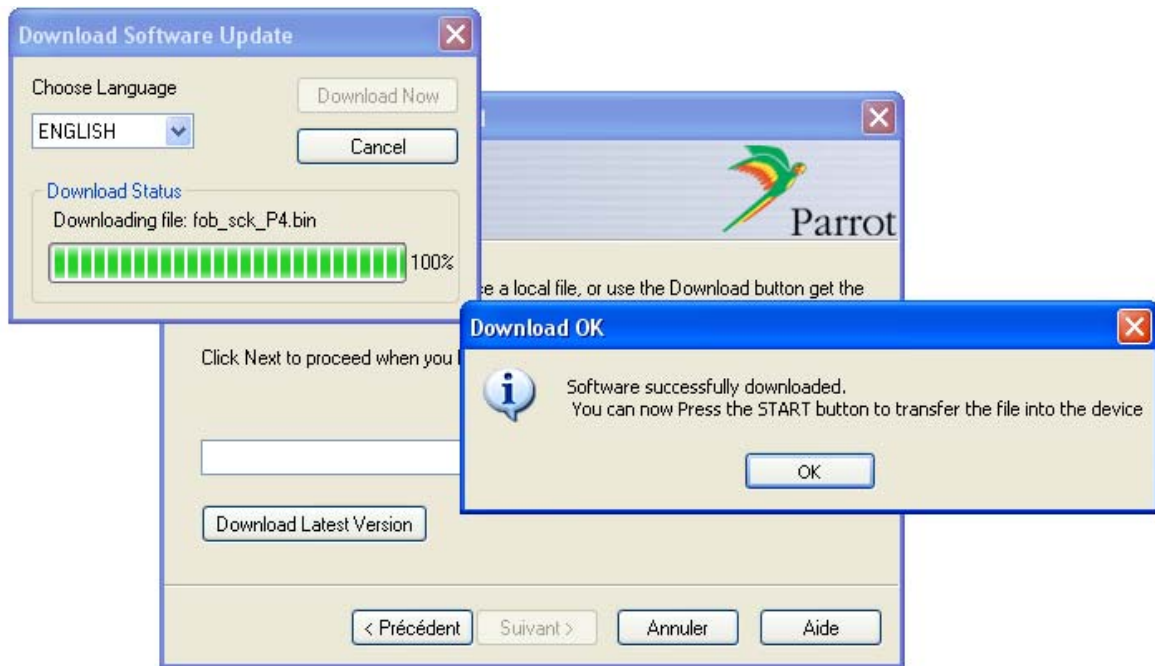


- Click "OK"



- Click on "Suivant" (Next)

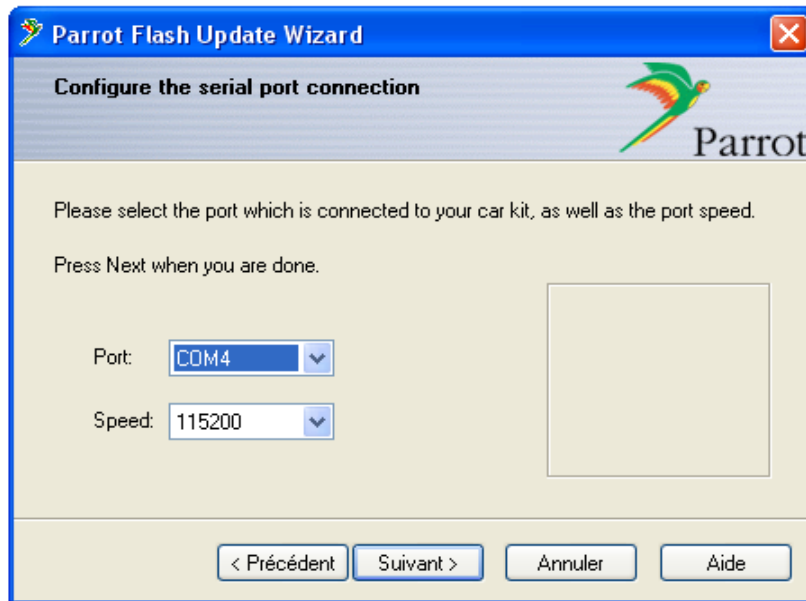

- Select the port which is connected to your flasher kit.
- Click on "Suivant" (Next)

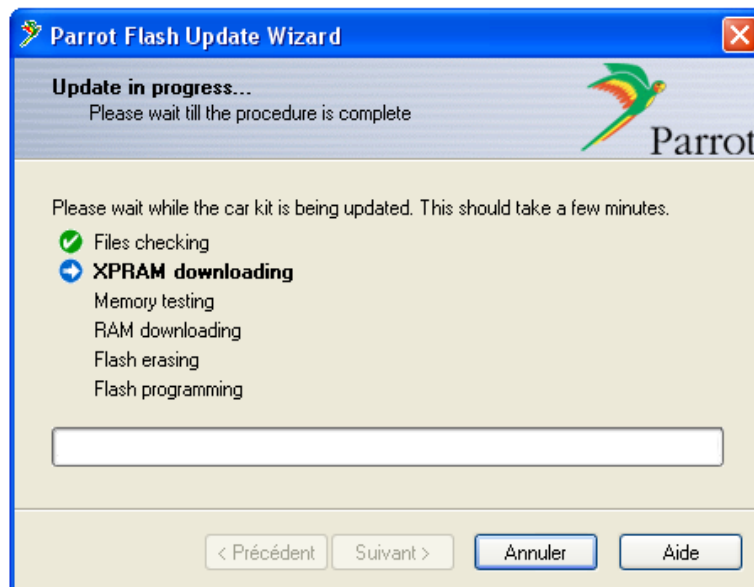

- Then now you can plug the car flasher kit power supply





- Click on “Terminer” (“Finish”)
- Remove the serial cable of the flasher kit Parrot.
- Plug the Parrot flasher kit in the cigar-lighter of your car.
- Wait until you can hear some “beeps” from the car kit.
- Press the green button of the car kit.
- Wait until the CK3000 Evolution announce the end of the upgrading.
- Then, remove the Parrot flasher kit from the cigar-lighter.
- Wait until your Parrot car kit reboots. This can take up to a few minutes. Do not switch off the ignition or power of your car kit in the mean time

And remember that you can contact your dealer : He is always available to help you...

