


5 CAN Configuration Mercedes

The wires corresponding to the CAN protocol must be connected correctly to your car stereo's CAN information. It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

N°		Color	Description
11		Green	CAN High
9		White	CAN Low
Not used		Violet	K-BUS

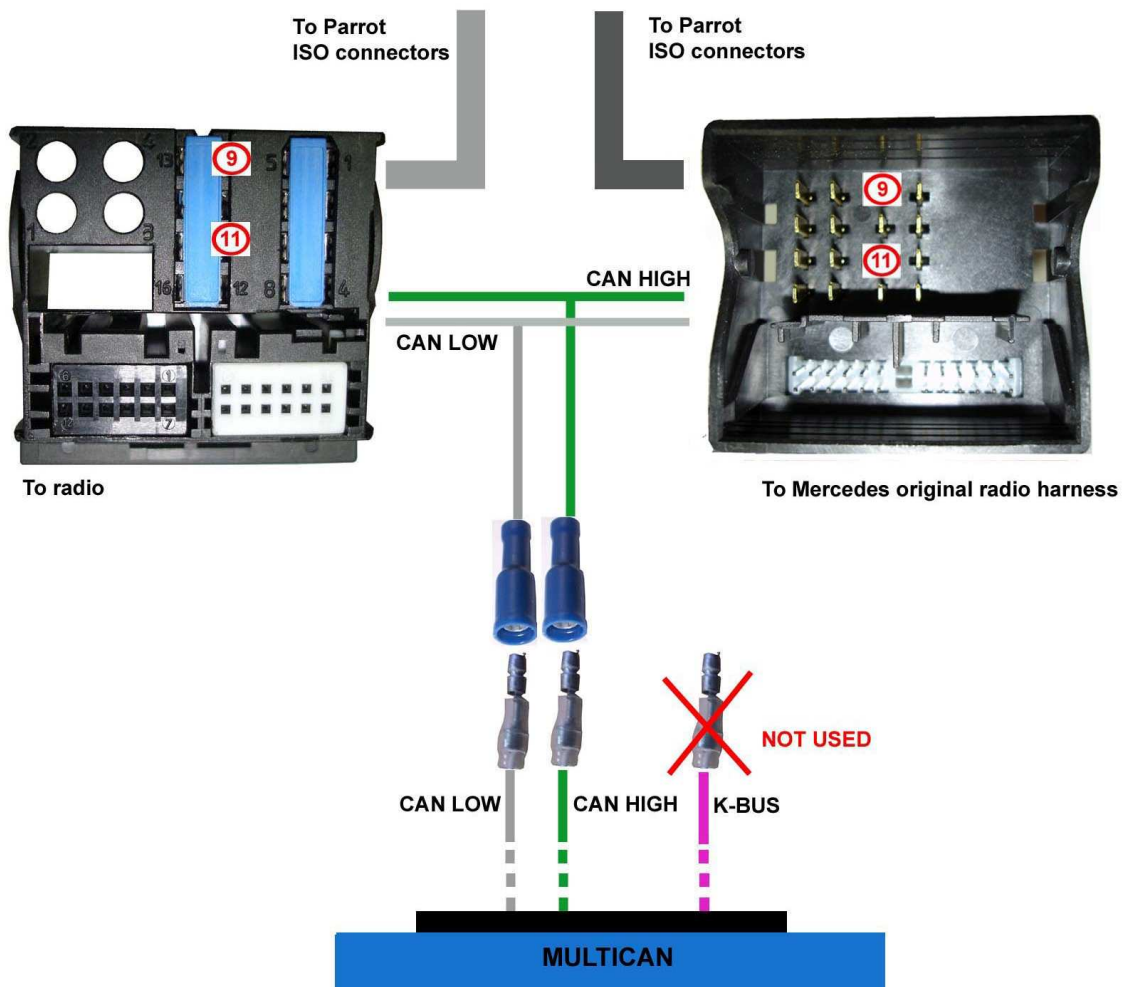

**Connect the white wire corresponding to CAN Low to pin 9.
Connect the green wire corresponding to CAN High to pin 11.**