


CAN Configuration OPEL-VAUXHALL

The wires corresponding to the CAN protocol must be connected correctly to your car stereo's CAN information. It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

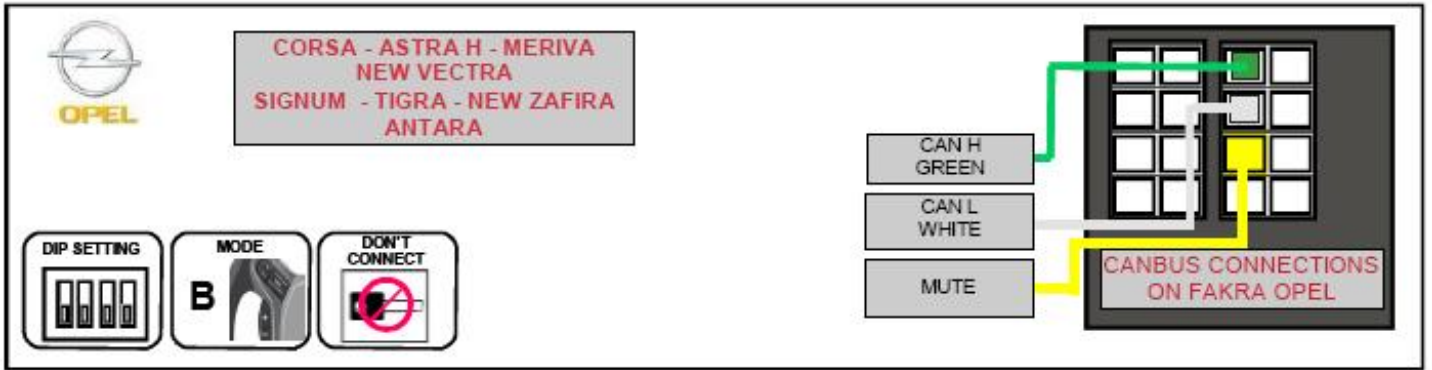

If your car stereo supports mute signal management, then your actions on the steering wheel commands while using a Parrot MKI9200 will not be taken into account by the car stereo. To find out the mute position of your car stereo, refer to the documentation of your device or contact the car manufacturer.