


## 5 Opel CAN Configuration

The wires corresponding to the CAN protocol must be connected correctly to your car stereo's CAN information. It is important to follow the wiring diagram for your vehicle. We would advise our customers to have the interface fitted by a professional.

N°		Color	Description
9		Green	CAN High
10		White	CAN Low
Not used		Violet	K-BUS

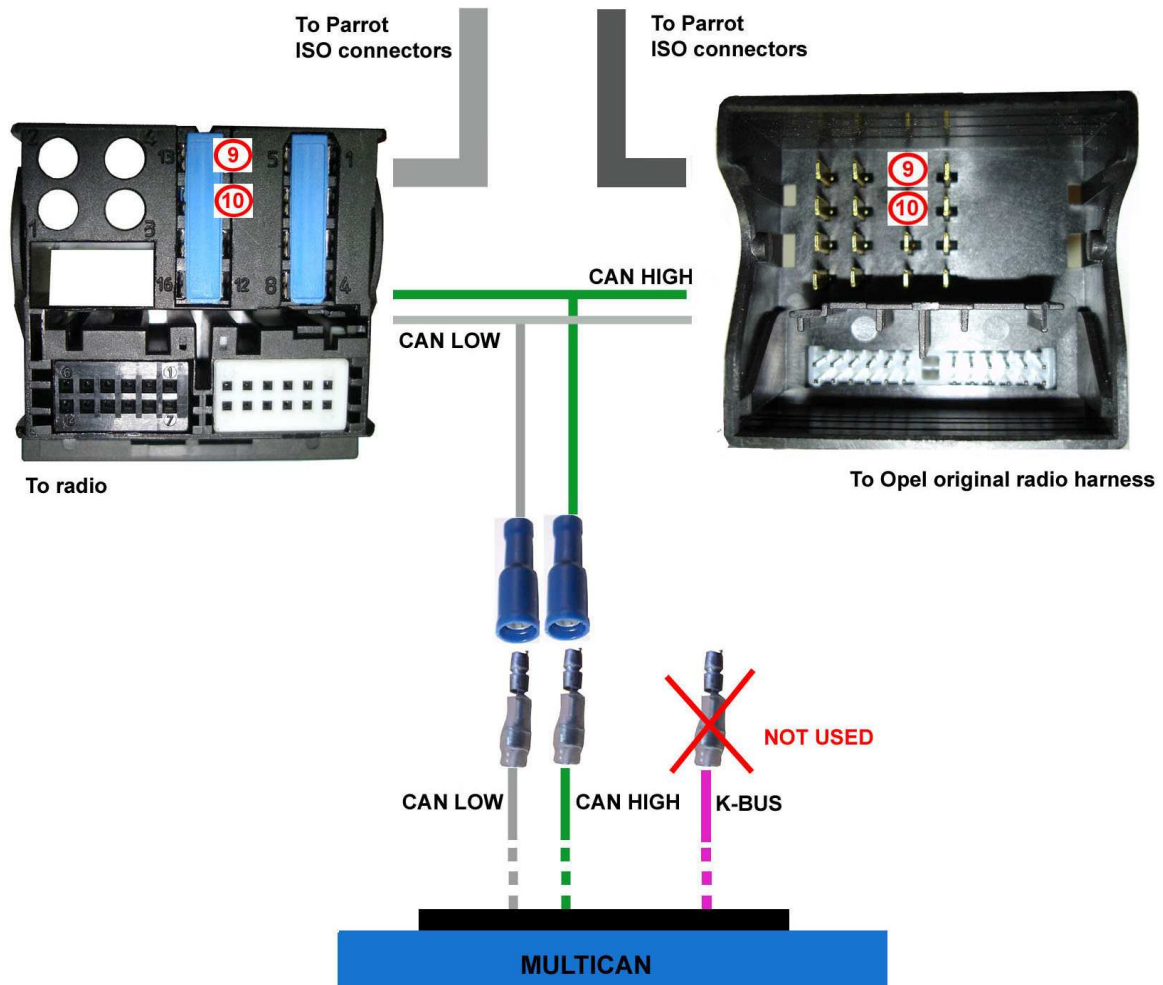

**Connect the green wire corresponding to CAN High to pin 9.  
Connect the white wire corresponding to CAN Low to pin 10.**